



OPENING AND ASSEMBLY

Open one pouch. Build one triangular monitoring tent.

The printed face stays outside and the adhesive chamber stays inside the folded paper structure.



SEALED UNIT



FLAT CARD



LOCKED TENT

01



SELECT ONE SEALED UNIT

Remove one aluminium bag from the color box. Keep unused units sealed until they are needed.

ONE BAG = ONE PAPER TRAP

02



OPEN THE ALUMINIUM BAG

Open the pouch without cutting or creasing the paper card, then slide the complete flat trap out by its paper edge.

DO NOT TOUCH THE STICKY AREA

03



FORM THE TRIANGLE

Pre-fold the scored panels so the printed face turns outward and the adhesive surface remains inside the tent.

KEEP THE BASE CREASE FLAT

04



ENGAGE THE TOP LOCK

Align the rounded top sections and insert the small paper tab. Confirm the triangular tent stands without springing open.

TOP LOCK STAYS ENGAGED



PLACEMENT, INSPECTION AND DISPOSAL


Stand upright on a dry shelf. Avoid food contact.

Use the trap as a dry-area monitoring device around stored-food locations; do not place it on unpackaged food or a food-contact surface.



UPRIGHT SHELF PLACEMENT

Stand the locked paper triangle on a firm, dry shelf and keep its open sides clear.

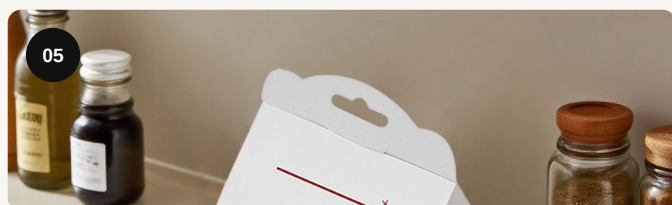

05

STAND ON A DRY SHELF

Place the locked triangle upright near suspected pantry-moth activity. Keep the base stable and the side opening clear.

NEAR STORED-FOOD AREAS




06

KEEP THE FORM CLEAR

Leave clear space at the open sides of the standing paper tent. Do not crush, cover or wedge the folded structure.

KEEP THE TENT UPRIGHT

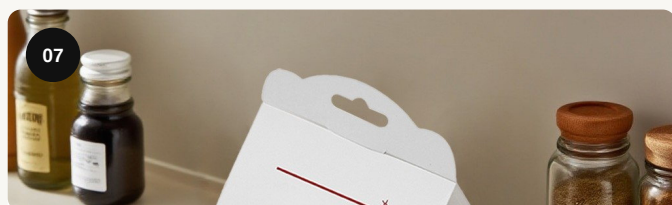

07

AVOID FOOD CONTACT

Keep the paper trap away from unpackaged food, utensils and work surfaces that directly contact food.

DRY MONITORING LOCATION ONLY



08

INSPECT REGULARLY

Look through the open side without touching the adhesive. Note the location and observed moth activity.

HANDLE BY A DRY OUTER PAPER EDGE



09

RELOCATE OR REPLACE

Move the trap if the location gives no useful activity information. Replace it when glue is contaminated or the trap is full.

FOLLOW THE PRODUCT LABEL



10

LIFT, BAG AND DISPOSE

Wear gloves, lift by a dry outer paper edge or top, away from the adhesive, and place the complete used tent in a disposal bag.

FOLLOW LOCAL DISPOSAL RULES

Wash hands after handling. Keep the adhesive from contacting non-target surfaces.