



CHECK, PLACE & CONNECT

STEPS 01-04

PT-802 Fly / Mosquito Light Trap - Lite / operating and care instructions

DRY INDOOR USE / KEEP OPENINGS CLEAR / DISCONNECT POWER AND WAIT FOR THE FAN TO STOP BEFORE CLEANING

01 IDENTIFY THE PT-802 LITE




ACTION

Confirm the top has one round physical power button and one manual slider, plus the open upper intake, lower vented housing and side USB-C input shown. Do not use a cracked or incomplete unit.

KEY CHECK

Button + slider layout; parts intact

02 CHOOSE A DRY, LEVEL POSITION

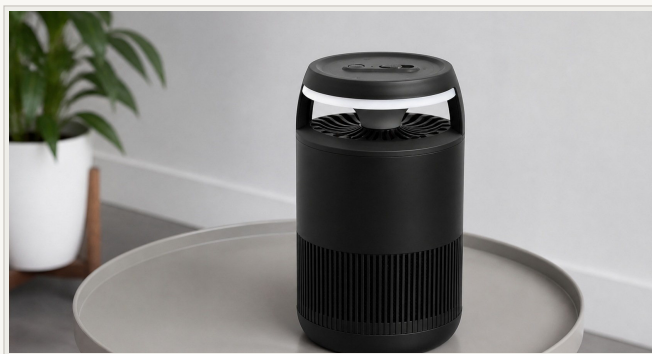

ACTION

Place the unit upright on a stable, dry, level indoor surface near the area to be monitored. Keep the upper intake and lower vents open; keep clear of water, heat, curtains and loose objects.

KEY CHECK

Upright; airflow unobstructed

03 CHECK THE AIR PATH



ACTION

With power disconnected, inspect the upper intake and lower ventilation openings. Remove only loose exterior debris with a soft dry brush or cloth; never push an object through the grille.

KEY CHECK

Openings clean; nothing inserted

04 CONNECT USB-C POWER



ACTION

Connect an undamaged USB-C cable to the side input, then to a power supply whose output matches the rating marked on the product. Route the cable so the unit cannot be pulled or tipped.

KEY CHECK

Correct rated supply; cable secure

PRE-USE MODEL CHECK

Use only the PT-802 Lite layout shown: one round physical power button and one manual slider. Timer, sleep, lock and I / II / III touch controls belong to PT-801 and are not stated for PT-802.



START, SELECT & CLEAN

STEPS 05-08

PT-802 Fly / Mosquito Light Trap - Lite / operating and care instructions

DRY INDOOR USE / KEEP OPENINGS CLEAR / DISCONNECT POWER AND WAIT FOR THE FAN TO STOP BEFORE CLEANING

05 START WITH THE ROUND BUTTON



ACTION

Press the physical round power button and confirm that the upper light and fan start steadily. Stop and disconnect the unit if the fan rubs, stalls or produces an unusual smell.

KEY CHECK

Light and fan operating steadily

06 SET THE MANUAL SLIDER




ACTION

Move the physical slider gently to the required end position. Do not force it past either stop or leave it between positions. PT-802 does not use the PT-801 timer, sleep or lock touch controls.

KEY CHECK

Slider seated at an end position

07 RUN WITH AIRFLOW CLEAR

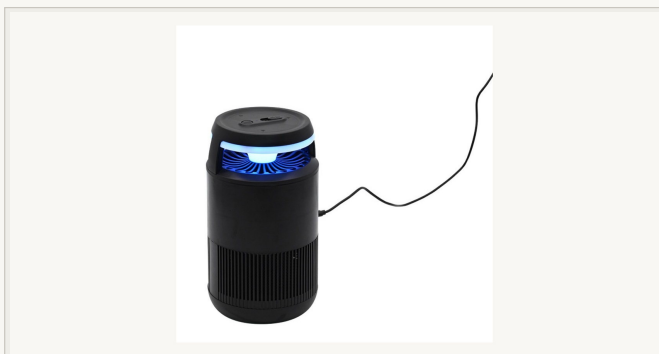

ACTION

Leave the unit upright and keep all openings unobstructed during operation. Check it regularly and disconnect power before moving it; never insert fingers or objects into the intake or vents.

KEY CHECK

Stable position; clear airflow

08 POWER OFF AND DRY-CLEAN



ACTION

Press power off, disconnect the USB-C cable and wait for the fan to stop. Wipe the exterior and accessible lower housing with a soft dry cloth. Do not immerse the unit or allow liquid into any opening.

KEY CHECK

Disconnected; exterior clean and dry

AFTER-USE SAFETY

Disconnect power and wait for the fan to stop before moving or cleaning the unit. Do not immerse it, wash the powered body or allow liquid into the USB-C port, fan, intake or lower vents.