



CHECK, SCREEN & FILL

STEPS 01-04

PT-701T Pesticide Powder Duster Transparent / preparation and operating sequence

USE ONLY LABEL-AUTHORIZED DRY POWDER / FOLLOW ITS LABEL, REQUIRED PPE AND LOCAL REQUIREMENTS

01 CHECK PT-701T & ITS PARTS




ACTION

Wear the PPE required by the powder label. Confirm the translucent reservoir, blue rings, top pump/cap, green delivery tube, tethered outlet cap and lower brass fitting are present and undamaged.

KEY CHECK

Translucent PT-701T; parts sound

02 SCREEN THROUGH THE BODY

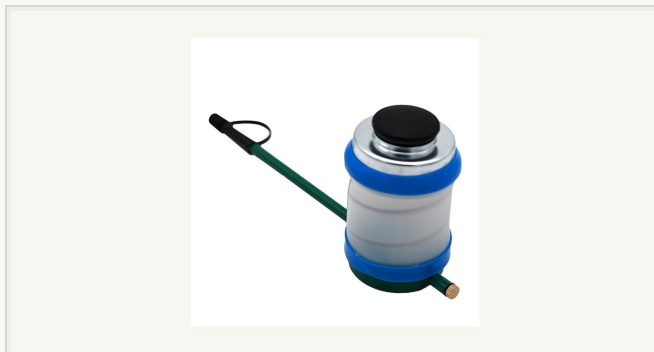

ACTION

With the empty unit upright, look through the reservoir for residue, moisture, cracking or a displaced component. An exterior check does not replace opening and direct inspection.

KEY CHECK

Body dry; no crack or obstruction

03 OPEN & ADD AUTHORIZED POWDER




ACTION

Remove the black top component without forcing it. Use a clean scoop to add only the dry powder and quantity permitted by its label; do not pack the powder or foul the sealing surface.

KEY CHECK

Powder loose; opening remains clean

04 RESEAT & CHECK THE LEVEL

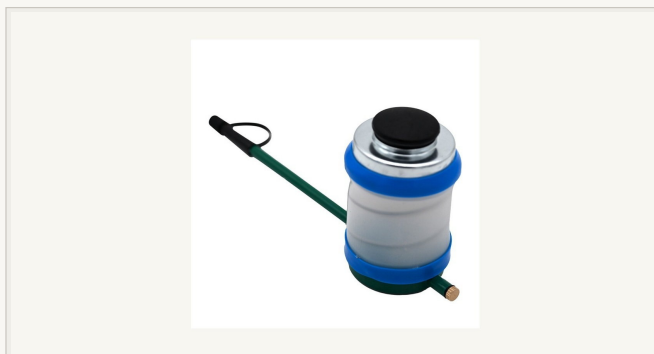

ACTION

Refit the black top component evenly and confirm it is fully seated. Use the translucent wall only as an approximate level screen; do not infer dosage from the visible level.

KEY CHECK

Top seated; approximate level visible

PRE-USE MODEL CHECK

Use only the PT-701T parts and configuration shown. Stop if the reservoir, pump/cap, blue rings, delivery tube, tethered cap and lower brass fitting is missing, cracked, blocked, loose or distorted.



POSITION, APPLY & STORE

STEPS 05-08

PT-701T Pesticide Powder Duster Transparent / preparation and operating sequence

USE ONLY LABEL-AUTHORIZED DRY POWDER / FOLLOW ITS LABEL, REQUIRED PPE AND LOCAL REQUIREMENTS

05 UNCAP & POSITION THE OUTLET



ACTION

Pull off the small tethered outlet cap and keep it attached by its loop. Position the black outlet close to the permitted dry target joint, away from people and non-target areas.

KEY CHECK

Cap retained; outlet close to target

06 STABILIZE & PRESS ONCE



ACTION

Hold the reservoir securely and press the top pump once with the outlet pointed at the permitted target. Allow the pump to return fully; stop if blocked or if a fitting is loose.

KEY CHECK

One controlled stroke; unit stable

07 APPLY & WATCH THE LEVEL




ACTION

Use short, deliberate strokes and only the amount and frequency allowed by the powder label. Keep the outlet close to the joint and use the body only to screen remaining powder.

KEY CHECK

Directed use; no visible cloud

08 RECAP, CLEAN & STORE

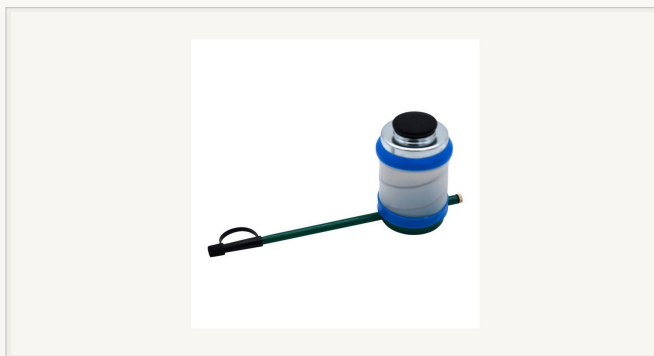

ACTION

After use, refit the outlet cap. Manage remaining powder as its label requires, wipe the exterior and tube dry, and store the duster secured away from children and food.

KEY CHECK

Outlet capped; exterior dry

AFTER-USE SAFETY

Avoid inhalation and skin or eye exposure. Keep powder away from food and non-target areas. Follow the powder label for cleanup, disposal and storage; never use a wet, damaged or blocked applicator.