



INSPECT, CLOSE & PLACE

STEPS 01-04

PT-202BR slim plastic multi-catch mouse trap - brown / read all steps before use

LIVE-CAPTURE DEVICE - CHECK FREQUENTLY / KEEP BOTH END ENTRANCES CLEAR

01 OPEN & INSPECT



ACTION

On a dry, level surface, release the centre front thumb tab and lift the single full-width lid on its rear long-edge hinge. Confirm the chamber is empty and the ABS body is undamaged.

KEY CHECK

One full-width lid; chamber clear

02 CHECK BOTH ENTRY RAMPS




ACTION

Inspect the two mirrored silver perforated plates. Each plate must tip inward freely and return to its resting position without rubbing, sticking or loose parts.

KEY CHECK

Two plates fitted; movement free

03 CLOSE THE LID

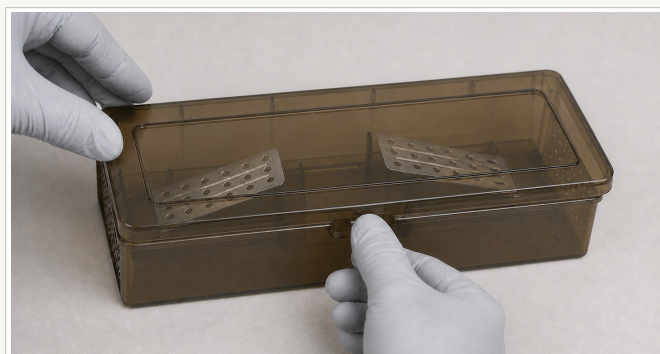

ACTION

Lower the full-width lid from the front edge and press the centre thumb tab until it sits flush all around. Do not touch or bend either metal entry plate.

KEY CHECK

Lid flush; both entrances clear

04 PLACE ALONG A WALL



ACTION

Set the closed trap flat on a dry floor with one long edge parallel and close to a wall runway. Keep both arched short-end entrances fully unobstructed.

KEY CHECK

Two end entries follow the wall run



PRODUCT REFERENCE / PT-202BR

ABS / 27 x 11 x 5.3 cm / 300 g / two mirrored one-way entry ramps

No winding or manual reset. Close the full-width lid and keep both end entrances clear.



CHECK, RELEASE & SERVICE

STEPS 05-08

PT-202BR slim plastic multi-catch mouse trap - brown / read all steps before use

LIVE-CAPTURE DEVICE - CHECK FREQUENTLY / KEEP BOTH END ENTRANCES CLEAR

05 INSPECT FREQUENTLY



ACTION

Check through the translucent lid at least daily, and more often in heat, cold or where local welfare rules require. Do not open or move an occupied trap at the monitoring point.

KEY CHECK

Never leave a capture unattended

06 MOVE THE CLOSED TRAP



ACTION

Wear gloves. Keep the lid closed and carry the slim trap level with both hands supporting the solid base. Move only to a release location permitted by local requirements.

KEY CHECK

Closed, level and supported below

07 RELEASE SAFELY



ACTION

Set the trap level on the ground with the open top directed away from people. Open the full lid, withdraw both hands and allow the mouse to leave. Do not touch, shake or pursue it.

KEY CHECK

Open top is the release route

08 DISINFECT, WIPE & DRY



ACTION

Wear gloves. Wet contaminated surfaces with a labelled disinfectant for its stated contact time, then wipe the empty chamber. Dry fully and recheck both ramps before reuse.

KEY CHECK

Two ramps free; unit fully dry

SAFETY & SERVICE

Designed for mice. Keep the trap out of reach of children, pets and non-target animals. Wear rubber or plastic gloves when handling a capture or contaminated trap. Do not sweep or vacuum dry rodent waste; wet it with a labelled disinfectant and observe the contact time. Follow local animal-welfare, transport and release requirements. Clean gloved hands before removing gloves, then wash hands with soap and warm water.